


Bottom - Floor Shadow Detail

North East Toilet Cubicles

Bottom shadow supplied in MR MFC must be correctly sealed to the floor, the bottom shadow must then be covered with a secondary waterproof PVC skirting or similar.

Tel: 01429 277500
info@netoiletcubicles.co.uk

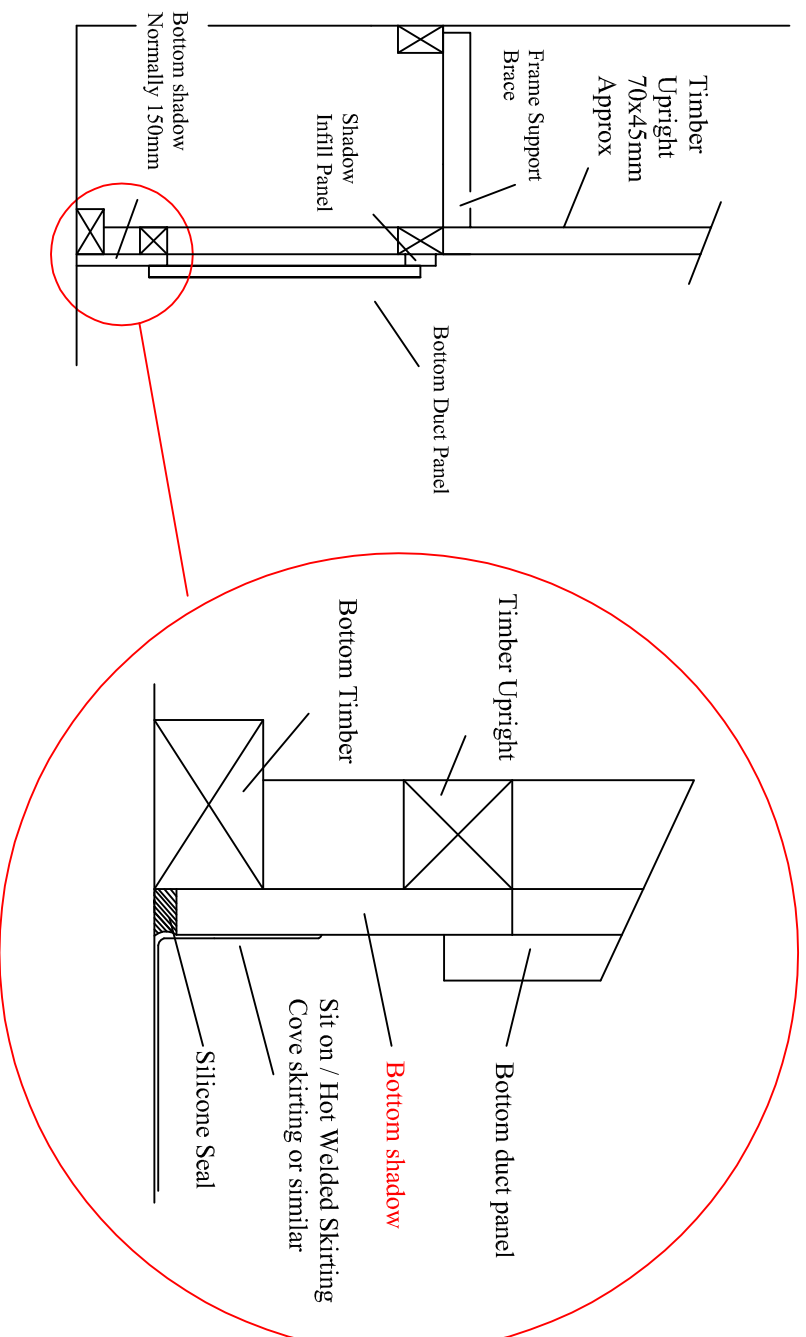

MR MFC SHADOW

(Olympic Range Board Material)

This arrangement should be followed wherever MR MFC shadow is fitted to the floor i.e. Bottom of WC and Urinal Duct Panels Areas, Vanity Frames etc.

Important Instruction